


Miele

Operating and Installation instructions

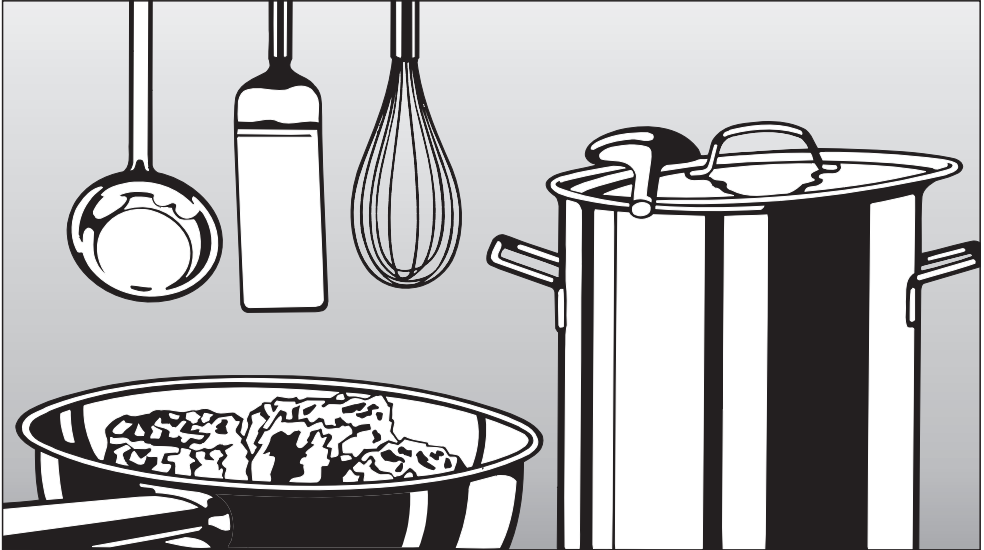

Ceramic hobs KM 5670 KM 5673

To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed or used for the first time.



M.-Nr. 06 681 280

Contents


Guide to the appliance	4
KM 5670	4
KM 5673	5
Cooking zone display	6
Timer/Memory display	7
Cooking zones	7
Warning and Safety instructions	8
Caring for the environment	14
Before using for the first time	15
General notes	15
Cleaning and heating up for the first time	15
Calibrating the sensor switches	16
Use	17
Sensor switches	17
Switching on	17
Settings	18
Cooking with Auto heat-up	19
Cooking without Auto heat-up	20
Switching on an extended area	21
Switching off and residual heat indicators	22
Suitable pans	23
Energy saving tips	23
Timer and Memory function	24
Introduction	24
Setting the minute minder	24
Switching a cooking zone off automatically	25
Timer starting value	25
Memory function	26
Combi mode	28

Safety features	29
Safety lock	29
Stop and Go	30
Safety switch-off	31
Overheating protection	32
Cleaning and care	33
Programming	35
Problem solving guide	39
After sales service	41
Installation	42
Safety instructions for installation	42
Building-in dimensions	46
Preparing the worktop	48
Fixing the spring clamps	49
Installing the hob	50
Sealant	51
Electrical connection	52
Wiring diagram	54

Guide to the appliance

KM 5670


Hob

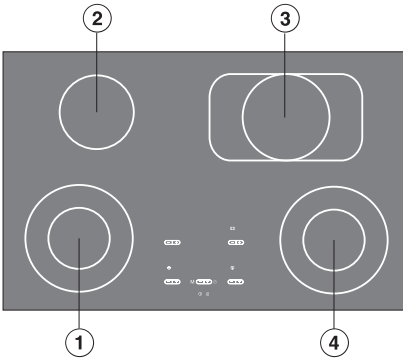

Cooking zones

- ①④ Double circle zones
- ② Single circle zone
- ③ Extended cooking zone

Control panel

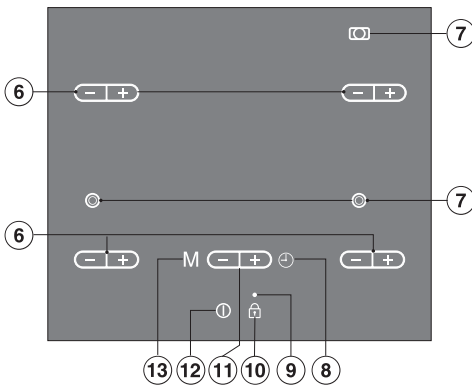

Sensor switches for


- ⑥ Setting the power level
- ⑦ Switching on an extended area
- ⑧ Setting the timer, changing between functions, selecting a cooking zone
- ⑩ Safety lock
- ⑪ Setting the time/
Selecting the memory programme
- ⑫ Hob ON/OFF
- ⑬ Memory function

Indicator lamp for

- ⑨ Safety lock

KM 5673


Hob

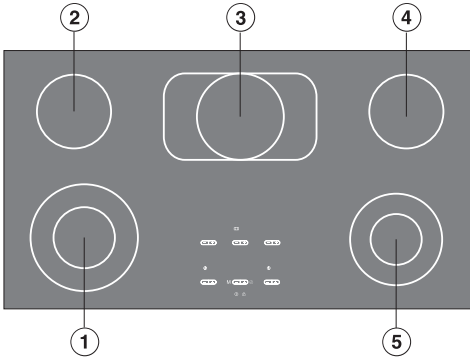

Cooking zones

- ①⑤ Double circle zones
- ②④ Single circle zones
- ③ Extended cooking zone

Control panel

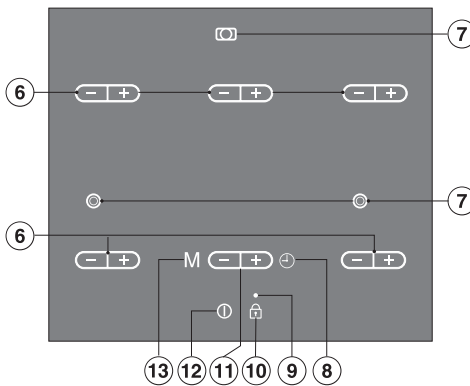

Sensor switches for


- ⑥ Setting the power level
- ⑦ Switching on an extended area
- ⑧ Setting the timer, changing between functions, selecting a cooking zone
- ⑩ Safety lock
- ⑪ Setting the time/
Selecting the memory programme
- ⑫ Hob ON/OFF
- ⑬ Memory function

Indicator lamp for

- ⑨ Safety lock

Guide to the appliance

Cooking zone display

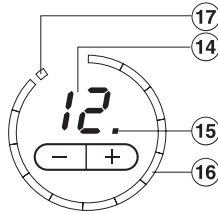

⑭ Displays:

0 = Cooking zone ready for use

1 to *12* = Power levels

≡ = Residual heat

F = Fault (see "Safety switch-off")

R = Auto heat-up when the power setting range has been extended

PD etc. = Programme (see "Programming")

S0 etc. = Status (see "Programming")


⑮ Indicator lamp for extending the power setting range (see "Programming")

⑯ Light ring: The number of curved lines lit up matches the power setting chosen (exception: see "Cooking with Auto heat-up")

⑰ Indicator lamp for outer circle of double/extended cooking zones

Timer/Memory display

(Example)

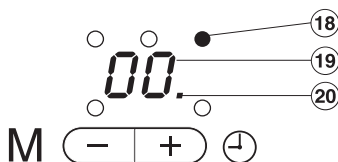

- ⑱ Indicator lamp for relevant zone, e.g. of the rear right cooking zone
- ⑲ Display for Time/Memory programme
00 to *99* = Time
P1 to *P5* = Memory programme
- ⑳ Memory programme indicator lamp

Cooking zones

Cooking zone	KM 5670		KM 5673	
	Ø in cm	Rating in watts for 230 V	Ø in cm	Rating in watts for 230 V
	14.5 / 21.0	1000 / 2200	14.5 / 21.0	1000 / 2200
	14.5	1100	14.5	1100
	-	-	17.0 / 17.0 x 29.0	1500 / 2600
	17.0 / 17.0 x 29.0	1500 / 2600	14.5	1100
	10.0 / 18.0	600 / 1800	10.0 / 18.0	600 / 1800
		Total: 7700		Total: 8800

Warning and Safety instructions

Technical safety

■ The appliance must be installed and connected by a suitably qualified and competent person in strict accordance with local and national safety regulations. The manufacturer cannot be held liable for damage caused by incorrect installation or connection.

■ The electrical safety of this appliance can only be guaranteed when continuity is complete between the appliance and an effective earthing system, which complies with local and national safety regulations. It is most important that this basic safety requirement is regularly tested, and if there is any doubt, the electrical wiring in the home should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

■ Do not connect the appliance to the mains electricity supply by an extension lead. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

■ Never open the casing of the appliance.

Tampering with electrical connections or components is highly dangerous to the user and can cause operational faults.

■ On hobs with bevelled glass edges a small gap may be visible between the hob and the worktop during the first few days after installation. This gap will reduce with time as the appliance is used and will not affect the electrical safety of your appliance.

Warning and Safety instructions

Correct usage

■ To avoid the risk of accidents and damage to the appliance you should read these operating instructions carefully before using it for the first time. They contain important notes on the safety, operation and care of the appliance.

■ For safety reasons this appliance must only be operated after it has been built in. This is necessary to ensure that all electrical components are shielded.

■ This appliance is intended for domestic use only and is not to be used for commercial purposes.

■ Only use the appliance to prepare food in the home. Any other usage is at the owner's risk and could be dangerous. The manufacturer cannot be held liable for damage caused by incorrect or improper use of the appliance.

■ Do not use the appliance to heat up the room. Due to the high temperatures radiated, objects near the appliance could catch fire. The life of the appliance could also be reduced.

■ Prolonged, intensive use of the appliance can cause the control area to heat up. This is quite normal and does not indicate a fault.

Warning and Safety instructions

Safety with children

■ The appliance is only intended for use by adults who have read these operating instructions.

■ This appliance is not a toy! To avoid the risk of injury keep children well away and do not let them play with it or use the controls. They will not understand the potential dangers posed by it. They should be supervised whenever you are working in the kitchen.

■ Older children may use the appliance only when its operation has been clearly explained to them, and they are able to use it safely, recognising the dangers of misuse. Supervise its use by the elderly or infirm.

■ Use the safety lock to prevent children operating the appliance or altering the settings.

■ The appliance gets hot when in use and remains hot for quite a while after being switched off. To safeguard against burning, keep children well away from the appliance at all times.

■ Do not store anything which might arouse a child's interest in storage areas above or next to the appliance. Otherwise they could be tempted into climbing onto the appliance with the risk of burning themselves.

■ Keep all pans out of reach of children. Turn pan handles inwards away from the edge of the hob. Danger of burning or scalding. Special hob guards are available from good retail outlets.

■ Packaging (e.g. cling film, polystyrene) and plastic wrappings must be kept out of the reach of babies and young children. Danger of suffocation. Dispose of or recycle all packaging safely as soon as possible.

■ Old appliances must be disconnected from the power supply, any plug rendered useless and the cable cut off directly behind the appliance to ensure it presents no danger to children while being stored for disposal. This should be done by a competent person.

Warning and Safety instructions

Protecting the appliance from damage

Do not drop anything on the ceramic surface. Even a light object could cause damage in certain circumstances.

Do not use pots or pans on the ceramic hob with bases with pronounced edges or ridges. These could scratch or scour the hob surface permanently. Grains of salt and sand can also scratch.

Do not allow either solid or liquid sugar, or pieces of plastic or aluminium foil to get on the ceramic surface when it is hot. If this should occur, switch off the appliance and carefully, while they are still hot, scrape off all remains of these materials using a shielded scraper blade. Take care not to burn yourself. If residues are allowed to cool before being removed, the ceramic surface will be susceptible to pitting or even cracking. Clean the appliance once it has cooled down.

To prevent the risk of spillages etc. burning on, remove any soiling as quickly as possible and ensure that pan bases are clean, dry and free of grease.

Do not use a steam cleaner to clean this appliance. The steam could reach electrical components and cause a short circuit. Pressurised steam could also cause permanent damage to the surface and to other components, for which the manufacturer cannot accept liability.

Unless the pan manufacturer states that you can do so, do not use pans with very thin bases on this hob and never heat up empty pans as they could get damaged. This could also damage the appliance.

Never place hot pans near the control area. This could damage the electronic unit underneath.

In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the appliance guarantee.

Warning and Safety instructions

Protection from burning and scalding

■ The surface of the appliance is hot when in use, and remains hot for quite a while after being switched off. There is a danger of burning until the residual heat indicators go out.

■ For added protection it is advisable to use heat-resistant pot holders or gloves when using the appliance. Do not let them get damp or wet, as this causes heat to transfer through the material more quickly with the risk of scalding or burning yourself.

■ Do not heat up unopened tins of food on the hob as pressure will build up in the tin and it can explode. This could result in injury and scalding or damage.

■ Do not use the hob as a resting place for anything else. The article could melt or catch fire if residual heat is still present or if the appliance is switched on by mistake.

■ Do not cover the appliance, e.g. with a cloth, kitchen foil, etc. This could be a fire hazard if the appliance is switched on by mistake.

■ Never leave the appliance unattended when cooking with oil or fat as these are fire hazards if overheated. Very hot oil can catch fire and could even set a cooker hood above on fire. Always heat fat slowly, watching as it heats.

■ If, despite this, oil or fat does catch fire, do not attempt to put out the flames with water. Use a suitable fire blanket, saucepan lid, damp towel or similar to smother the flames.

■ Do not flambé under a cooker hood. The flames could set the cooker hood on fire.

Warning and Safety instructions

Appliance faults

■ In the event of damage or a defect, switch off the appliance immediately. Disconnect completely from the electricity supply. If the appliance has not yet been fully installed, the electricity cable must be disconnected from the supply point. If connected via a plug and socket, switch off at the socket and withdraw the plug. Contact the Service Department. Do not reconnect the appliance to the mains electricity supply until after it has been repaired.

■ If there is any damage to the ceramic surface the appliance must be disconnected from the mains electricity supply immediately and not used until it has been repaired. Danger of electric shock.

■ Repairs must only be carried out by a suitably qualified and competent person. Repairs and other work by unqualified persons could be very dangerous and could damage the appliance. The manufacturer cannot be held liable for unauthorised work. Never open the housing of the appliance.

■ While the appliance is under guarantee, repairs should only be undertaken by a service technician authorised by the manufacturer. Otherwise the guarantee is invalidated.

Further safety notes

■ When using an electric socket near the appliance, care should be taken that the cable of the electrical appliance does not come into contact with the hot appliance. The insulation on the cable could become damaged, giving rise to an electric shock hazard.

■ Always ensure that food is sufficiently cooked or reheated. Many factors will affect the overall cooking time, including the size and amount of food and its temperature. Some foods may contain micro-organisms which are only destroyed by thorough cooking; therefore when cooking or reheating foods such as poultry, it is particularly important that the food is completely cooked through. If in doubt, select a longer cooking or reheating time.

■ Do not use plastic or aluminium foil containers. These melt at high temperatures and could damage the ceramic surface. Fire hazard.

■ If a domestic animal gets onto the hob, a sensor switch could be touched and a cooking zone switched on. Keep pets away from the hob at all times.

■ Spray canisters, aerosols and other inflammable substances must not be stored in a drawer under the hob. Cutlery inserts must be heat-resistant.

The manufacturer cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Caring for the environment


Disposal of packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal and can normally be recycled.

Packaging (e.g. cling film, polystyrene) and plastic wrappings must be kept out of the reach of babies and young children. Danger of suffocation. Dispose of or recycle all packaging materials as soon as possible.

Disposal of your old appliance or machine

Electrical and electronic appliances / machines often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance or machine. Please do not therefore dispose of your old machine or appliance with your household waste.

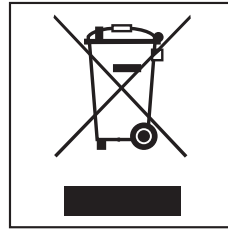

Please dispose of it at your local community waste collection / recycling centre and ensure that it presents no danger to children while being stored for disposal.

It should be unplugged or disconnected from the mains electricity supply by a competent person. The plug must be rendered useless and the cable cut off directly behind it to prevent misuse.

Before using for the first time

General notes

Your appliance has a "programming" function which you can use to customise the appliance to your particular requirements (see "Programming").

Please stick the extra data plate for your appliance supplied with this documentation in the space provided at the end of the instruction book.

Keep these instructions in a safe place for reference, and pass them on to any future user.

Cleaning and heating up for the first time

Before using for the first time, clean the appliance with a damp cloth only and then wipe dry.

Do not use washing up liquid to clean the ceramic surface as it can leave a blue sheen which may be difficult to remove.

Metal components have a protective coating which may give off a slight smell when heated up for the first time. The smell and any vapours will dissipate after a short time, and do not indicate a faulty connection or appliance.

Before using for the first time

Calibrating the sensor switches

Automatic calibration

To ensure trouble free operation, the sensors

- need to be recalibrated after installation and each time the electricity supply fails, e.g. after a power cut.
The safety lock indicator lamp lights up during automatic calibration, and the hob cannot be switched on.
- adjust themselves constantly whilst the hob is in use.

If automatic calibration is unsuccessful, an **H** lights up in the cooking zone display on the left and right at the front, and an **F** lights up on the left at the back. Numbers light up in the cooking zone display on the right at the back and in the Timer/Memory display.

If this is the case, recalibration will have to be carried out manually.

Manual calibration

- Make sure that there is no direct light (from the sun or from an artificial source) falling onto the hob. The area surrounding the hob must not be too dark, nor should the relationship between light and shade be constantly changing.
- Make sure that there is nothing covering the sensors or the hob. Take any pans off the hob and wipe away any food deposits.
- Interrupt the power supply to the hob for approx. 1 minute.

Reconnect the hob to the electricity supply. The electronic unit will reset the sensitivity levels of the sensors.

If this does not solve the problem, please call the Miele Service department.

Sensor switches

This hob is equipped with electronic sensor switches which react to finger contact.

To operate a cooking zone, touch the relevant sensor switch. Each time you touch a sensor switch, an audible tone sounds.

Take care only to touch the middle of the sensor required. Keep the control panel clean, and do not place anything on top of it. The sensors may fail to react or they could mistake the article or any dirt for a fingertip contact, thereby activating a function or even causing the hob to switch off automatically (see Safety switch-off.)

Never place hot pans on the sensor switches. The electronic unit underneath could get damaged.

Switching on

The hob must be switched on before any of the zones can be used.

To switch the hob on:

- Touch the ON/OFF sensor ①.

0 appears in each of the cooking zone displays. **00** appears in the Timer/Memory display. If no further entry is made, the hob will switch itself off after a few seconds for safety reasons.

To switch a cooking zone on:

- Select a power setting between **1** and **7** by touching the **-** or **+** sensor.

To select cooking **with** Auto heat-up, press the **-** sensor first (see "Auto heat-up"). To select cooking **without** Auto heat-up, press the **+** sensor first.

If you wish to switch on **another** cooking zone, and the **0** for that zone has already gone out, simply press the **-** or **+** briefly. The **0** will reappear and you can select a power setting (with or without Auto heat-up).

Use

Settings

Cooking process	Settings*	
	standard factory settings (9 settings)	extended settings** (23 settings)
Melting butter, chocolate etc. Dissolving gelatine Preparing yoghurt	1 - 2	1 - 2.
Thickening sauces containing egg yolk and butter Warming small quantities of food/liquid Keeping warm food which sticks easily Cooking rice	1 - 3	1 - 3.
Warming liquid and semi-solid foods Thickening sauces, e.g. Hollandaise Making porridge Preparing omelettes, lightly fried eggs Steaming fruit	3 - 5	3 - 5.
Defrosting deep frozen food Steaming vegetables, fish Cooking dumplings, potatoes, pulses Cooking broths, pulse soups	4 - 6	3 - 5.
Bringing to the boil and continued cooking of large quantities of food	7	7.
Gentle braising (without overheating the fat) of meat, fish, vegetables, fried eggs etc.	8 - 9	8 - 9.
Frying pancakes etc.	9 - 11	9 - 11.
Boiling large quantities of water Bringing to the boil	11 - 12	11. - 12

* These settings, which envisage approx. 4 helpings, should only be taken as a guide. With deep pans, larger quantities or when cooking without a lid, a higher setting is required. For smaller quantities, select a lower setting.

** If you wish to fine-tune a setting, you can extend the power setting range (see "Programming"). The intermediate setting will be represented by an illuminated dot next to the number.

Cooking with Auto heat-up

When Auto heat-up has been activated, the cooking zone switches on automatically at the highest setting and then switches to the continued cooking setting selected. The heat-up time depends on which continued cooking setting has been chosen (see chart).

As the higher continued cooking settings are generally used for frying food, only a relatively short heat-up time is needed to heat up the pan initially.

Continued cooking setting*	Heat-up time in minutes and seconds (approx.)
1	0 : 30
1.	1 : 15
2	2 : 00
2.	2 : 15
3	2 : 30
3.	2 : 45
4	3 : 00
4.	3 : 30
5	4 : 00
5.	5 : 00
6	6 : 00
6.	7 : 30
7	9 : 00
7.	9 : 10
8	2 : 00
8.	2 : 00
9	2 : 00
9.	2 : 00
10	2 : 30
10.	2 : 30
11	2 : 30
11.	2 : 30
12	-

* The continued cooking settings with a dot after the number are only available if the power level range has been extended (see "Programming").

Use


How to activate Auto heat-up

- Switch the cooking zone on by touching the **-** sensor until the required continued cooking setting appears, e.g. **3**.


The **12 curved lines** show in the light ring during the Auto heat-up time. After the Auto heat-up time has finished, **only the number of curved lines**, for the relevant **continued cooking setting** which has been chosen, show in the light ring.

Example:

during the Auto heat-up time:

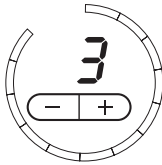


during the continued cooking time:

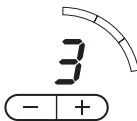

At any point during the Auto heat-up time you can use **-** or **+** to increase or lower the continued cooking setting. The Auto heat-up time will alter accordingly.

Cooking without Auto heat-up


- Switch the cooking zone on by touching the **+** sensor until the continued cooking setting you require appears in the in the display, e.g. **4**.

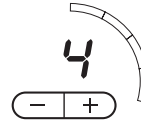



The same number of curved lines will show in the light ring, i.e. if setting **4** is selected, four segments will light up.


Switching on an extended area



Depending on the model of hob, the outer circle of a double circle zone or the extended cooking zone can be switched on to provide an extended cooking area when cooking with larger pans.

- Switch the zone on by pressing the - or + sensor, and select a power setting.
- Then press the sensor for the outer circle of the double circle zone or the extended cooking zone .

If a  is showing in the cooking zone display, you can touch the  sensor first and then choose a power setting.

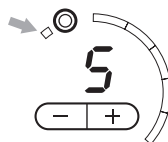A short bar will appear in the top left of the light ring to indicate that the outer circle/extended cooking zone has been switched on (see arrow).




To switch the outer circle or extended cooking zone off, touch the  sensor again or set the display for the zone back to .

 
Use

Switching off and residual heat indicators

To switch off a cooking zone:

- Touch the - and + sensors for the zone you want to switch off **at the same time**.

A  will light up in the display for that zone for a few seconds. If the cooking zone is still hot, residual heat will then be indicated in the display.



To switch off the hob:

- Touch the ON/OFF sensor .

This switches off all cooking zones. The residual heat indicator will appear in the display of any cooking zone which is still hot.

The lines of the residual heat indicator go out one after another as the cooking zones cool down. The last horizontal line only goes out when the cooking zone is safe to touch.


Do not touch or place any heat-sensitive objects on the cooking zones while the residual heat indicators are on.
Danger of burning and fire hazard.

If there is an interruption to the power supply, the residual heat indicators will flash on and off.


Please note that if there is a fault message, the residual heat indicators will not light up even if the cooking zones are still hot.

Suitable pans

- For optimum energy consumption during cooking, only pans with flat or very slightly concave bases should be used. When the pan is hot, the base should rest evenly on the hob. Uneven bases will lengthen cooking time. Check for suitability when purchasing new pans.

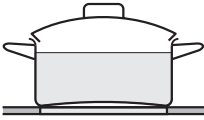

cold

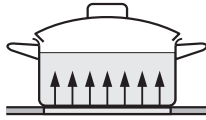


hot

- Check that the diameter of the pan base is wide enough for the cooking zone so that heat is not lost unnecessarily. Please note that the maximum diameter quoted by manufacturers often refers to the diameter of the top rim of the pan. The diameter of the base (generally smaller) is more important.




too small

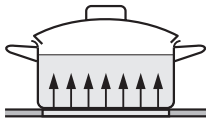


suitable

Energy saving tips

- Use a pan lid whenever possible to minimise heat loss.

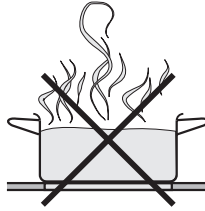

uncovered

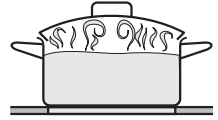

covered

- When cooking for a long time, switch the cooking zone off about 5 to 10 minutes before the end of the cooking time. In this way use is made of the residual heat.

Timer and Memory function


Introduction

The hob is fitted with:

- Minute minder (Timer function)
- Automatic switch-off for the cooking zones (Timer function)
- Memory function.

These functions are described **one by one** on the following pages. The Combi mode is described in the section of that name.

You can set a time of **1** to **99** minutes using the Timer function. Use the **-** sensor to reduce the time from **99** to **00** and the **+** sensor to increase the time from **00** to **99**. The display can be put back to **00** by touching **-** and **+** at the same time.

On all functions, **00** will appear in the display for a few seconds at the end of the time, and an audible tone will sound at the same time. To turn the audible tone off before it has finished, touch the  sensor.


Setting the minute minder

The minute minder can be used with the hob switched on or off. It works like a manual kitchen timer.

- Touch the , **-** or **+** sensor.

00 will show in the Timer/Memory display.

- Touch the **-** or **+** sensor until the time you require appears in the display, e.g. 15 minutes.

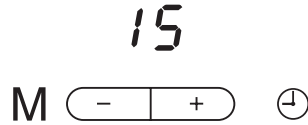

The time then counts down in minutes. The time remaining can be seen in the display and changed at any time by touching **-** or **+**.


Switching a cooking zone off automatically

You can set a time at the end of which a given cooking zone will switch off automatically. This automatic switch-off function can be used on all of the cooking zones at the same time.

- Select a power setting for the zone you require, e.g. back right, in the usual way.
- Touch the ⊖ sensor until the indicator lamp for the selected zone flashes (back right).

If more than one cooking zone is switched on, the indicator lamps will light up clockwise beginning with the front left zone.

- Touch the - or + sensor until the time you require appears in the display, e.g. 15 minutes.

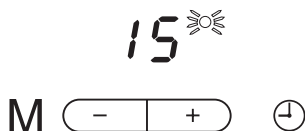

The time then counts down in minutes. The time remaining can be seen in the Timer/Memory display and changed at any time by touching - or +.

If you want to set another cooking zone to switch off automatically, follow the same steps as described above.

If more than one switch-off time is programmed, the shortest time remaining will show in the display, and the indicator lamp for that particular cooking zone will flash. All the other indicator lamps will light up constantly. If you want to check on the remaining time for another zone, touch the ⊖ sensor until the indicator lamp for the zone you require flashes.

Timer starting value

The timer is set at the factory to start at 00 when the + or - sensor is touched.

This setting can be adjusted so that the time you last used appears in the display when you press + or - (see "Programming - P14. ").

Example:

If P14, S1 is programmed, and the last time the minute minder was used was for 5 minutes, 00 will appear in the display when you switch on the Timer; when you then touch + or -, the display will change to 05.

You can still select any time you want, even if you have adjusted the timer default setting.

Timer and Memory function

Memory function

The settings used on a particular cooking zone from switching on right through to switching off can be recorded as a Memory programme. Up to 5 of your favourite cooking processes can be saved as Memory programmes. However, only one programme can be recorded or used at any one time.

Memory programmes can be recorded on any of the cooking zones. Each cooking zone can have more than one programme recorded on it.

Programme slots that have settings memorised to them are indicated by a dot after the number, for example:

P 1 Nothing saved in memory

P 1. Programme settings are saved in memory.

If all programme slots are occupied and you want to save a new cooking process, you will first have to delete one of the existing programmes.

Recording a Memory programme

The maximum time that can be recorded is 90 minutes with a maximum of 10 changes in power level.

- Switch the hob on.
- Press the **M** sensor.

P 1 will show in the Timer/Memory display.

- Touch the **+** sensor until the programme number you require shows in the display.
- Touch the **M** sensor until a long audible tone sounds.
- Within 10 seconds of this, switch on the cooking zone required.

The recording process now begins.

During recording, the indicator lamp for the cooking zone being used flashes in the Timer/Memory display, and the programme number lights up.

The process will be saved automatically when the cooking zone is switched off, or if you touch **M** until a long audible tone sounds. After being saved, the programme steps show in the display.

Times are displayed rounded up to the nearest full minute, but when the programme is running the steps are timed to the second.

Using a Memory programme

The same pan must be used in order to obtain the same cooking result as when the programme was recorded. The quantity and size of individual ingredients must also be the same.

- Switch the hob on.
- Press the **M** sensor.

P 1 will show in the Timer/Memory display.

- Touch the **+** sensor until the programme number you require shows in the display.
- Touch the **M** sensor until a long audible tone sounds.

The relevant cooking zone switches on automatically, and switches off once the programme has run. Whilst the programme is running, the indicator lamp for the cooking zone flashes in the Timer/Memory display, and the programme number shows alternately with the remaining time.

Checking the steps of a Memory programme

- Switch the hob on.
- Touch the **M** sensor.
- Touch the **+** sensor until the programme number you require shows in the display.

The applicable power level appears in the appropriate cooking zone display; the indicator lamp for the cooking zone flashes in the Timer/Memory display, and the time programmed for the power level appears. Times are displayed rounded up to the nearest full minute, but when the programme is running the steps are timed to the second.

Deleting a Memory programme

- Switch the hob on.
- Touch the **M** sensor.
- Touch the **-** or **+** sensor until the programme number you require shows in the display.
- Touch the **-** and **+** sensors **at the same time** until a long audible tone sounds, and the point by the number is deleted.

Timer and Memory function

Combi mode

The minute minder, automatic switch-off and memory functions can all be used at the same time.

If you wish to use the **minute minder at the same time as another function:**

Touch the ⊖ sensor until the indicator lamps for the programmed cooking zones light up constantly, and 00 appears in the Timer/Memory display.

If you want to programme in **one or more switch-off times at the same time as another function:**

Touch the ⊖ sensor until the indicator lamp for the required cooking zone flashes.

If you want to use the **memory function at the same time as another function:**

Follow the steps described in "Memory function".

Shortly after the last entry, the Timer/Memory display switches to the function with the shortest remaining time. Except: When a Memory programme is being recorded, all programmed times (minute minder, automatic switch-off) count down in the background. They only show in the display as 00 once they have completely finished running.

You can check the functions and remaining times which are counting down in the background by touching the ⊖ sensor until the indicator lamp required flashes (Memory function or automatic switch-off).

- the indicator lamps light up constantly (minute minder).

Starting with the shortest remaining time which is showing in the display, all cooking zones that are in use and the minute minder are selected clockwise. Except: Recording a Memory programme.

Safety lock

Keep children away from the hob for their own safety.

Your appliance is equipped with a safety lock to prevent the hob and the cooking zones being switched on or any settings being altered.


The safety lock can be activated when the hob is switched off as well as when it is in use.

If the safety lock is activated **when the hob is switched off**, then the hob cannot be switched on.

If the safety lock is activated **when the hob is in use**:


- The settings for the cooking zones and the timer settings cannot be altered.
- The cooking zones and hob can be switched off but once switched off cannot be switched on again.

To activate the safety lock:


- Touch the safety lock sensor  until the relevant indicator lamp comes on.

The indicator lamp will go out after a short while.

The lamp will come on again to show that the safety lock has been activated, if

- you touch the safety lock  sensor.
- you try to change a setting.

To deactivate the safety lock:

- Touch the safety lock sensor  until the indicator lamp goes out.

You can alter the setting from one finger to three finger operation (see "Programming - P4") to make it harder for children to operate the appliance.



Please note that the safety lock will deactivate if there is a power cut.

Safety features

Stop and Go

Your appliance has a Stop and Go feature which, when activated, reduces the power of all cooking zones that have been switched on. This allows you to leave the hob unattended for a short time without any danger of pans boiling over or burning.

To activate Stop and Go:


- Touch the  sensor until you hear two consecutive beeps.
Be careful not to continue touching the  sensor for too long, as this will activate the safety lock.

The indicator lamp for the safety lock will start to flash. The power of the cooking zones in use will be reduced to setting 1, and a 7 will appear in the corresponding cooking zone displays.

When Stop and Go is activated

- the countdown of a time programmed in for automatic switch-off will be interrupted. When deactivated, the time will continue to run.
- the minute minder will continue without interruption.
- the recording of a Memory programme will be cancelled.

To deactivate Stop and Go:

- Touch the  sensor until the indicator lamp goes out.

The cooking zones will now run at the level that was previously set.

Safety switch-off

Safety switch-off with an over-long cooking time

Your hob is fitted with a safety switch-off feature in case you forget to switch it off yourself.

If one of the cooking zones is heated for an unusually long period of time (see chart), and the power settings are not altered, the hob will switch itself off automatically and the appropriate residual heat indicator will appear.

Power setting*	Maximum operating time in hours
1 / 1.	10
2 / 2.	5
3 / 3.	5
4 / 4.	4
5 / 5.	4
6	4
6.	3
7 / 7.	3
8 / 8.	3
9 / 9.	2
10 / 10.	2
11 / 11.	2
12	1

* The power settings with a dot after the number are only available if the power setting range has been increased (see "Programming").

- To use the cooking zone again, switch it back on in the usual way.

Safety switch-off if the sensors are covered

Your hob will switch off automatically if one or several of the sensors remain covered for longer than 10 seconds, for example, by finger contact, food boiling over or by an object such as an oven glove or tea towel.

An audible tone will sound every 30 seconds (for a maximum of ten minutes) and an *F* will flash in the display for the sensor which is covered.



- Clean the control area or remove the obstruction.

This will turn off the tone and the *F* will go out.

- Switch the hob back on again with the ON/OFF sensor ①. The cooking zones can now be used again as normal.

Safety features

Overheating protection

Each cooking zone is equipped with overheating protection. An internal temperature limiter switches off the heating elements in the cooking zone before the ceramic surface overheats.

Once the ceramic has cooled down to a safe level the heating will automatically switch back on again.

Overheating can be caused by:

- switching on a cooking zone without a pan on it.
- heating up an empty pan.
- the base of a pan not sitting evenly on the cooking zone.
- the pan not conducting the heat properly.

You can tell that the overheating protection has activated because the heating switches on and off even when the highest setting is selected.

Do not use a steam cleaner to clean this appliance. The steam could reach electrical components and cause a short circuit. Pressurised steam could also cause permanent damage to the surface and to components, for which the manufacturer cannot accept liability.

Do not use any sharp objects which could damage the seal between the ceramic surface and the surrounding frame and between the frame and the worktop.

Never use cleaners containing sand, soda, alkalis, acids or chlorides, oven sprays, dishwasher detergents, nor steel wool, abrasive cleaning agents, hard brushes, scouring pads and cloths. You should also avoid using sponges etc. which have previously been used with abrasive cleaning agents, as this will damage the surface.

Do not use washing up liquid to clean the ceramic surface as it can leave a blue sheen which may be difficult to remove.

Clean the appliance regularly, preferably after each use. Allow the hob to cool down before cleaning.

To prevent the risk of spillages burning on, remove any soiling as soon as possible, and ensure that pan bases are clean, dry and free of grease.

Most soiling can be wiped off using a damp cloth. Stubborn soiling may need to be removed with a shielded scraper blade.

After cleaning, dry thoroughly with a soft cloth to prevent a build-up of limescale deposits.

To remove any limescale deposits, caused for example by water boiling over as well as metallic marks e.g. from saucepan bases, the ceramic surface can be cleaned using a proprietary cleaning agent for ceramic surfaces. Follow the manufacturer's instructions on the packaging and apply using a soft cloth or kitchen paper towel.

Finally, wipe the hob surface with a damp cloth and then dry it with a clean soft cloth. Ensure that every trace of cleaner has been removed from the surface. Any remaining trace could have a corrosive effect on the hob when it is next heated up.

Note that some cleaning agents contain a protective additive designed to prevent water marks and smears adhering to the surface.

E-Cloth

A microfibre "E-Cloth" is available from the Miele UK Spare Parts Department which is suitable for cleaning surfaces such as stainless steel, glass, plastic and chrome without the use of chemicals.


Cleaning and care

Should any **sugar, plastic or aluminium foil** spill or fall on to a hot cooking zone while it is in use, first switch off the appliance. Then, **immediately**, while they are still hot, scrape off all remains of these materials using a shielded scraper blade. Take care not to burn yourself.

Allow the hob to cool down and then clean with a suitable proprietary ceramic cleaner.

Appliances with **aluminium frames** (see data plate) are prone to scratching, alkali and acid damage. Take great care when cleaning the aluminium frame. Do not use cleaning agents for stainless steel or descaling agents on aluminium surfaces. Soiling should be wiped off as soon as possible after using the appliance. If the soiling is left for a long time it can have a damaging effect on the aluminium surfaces. Intensive cleaning with proprietary ceramic cleaners can cause the frame to take on a shiny appearance.


You can change the standard settings of your hob (see chart).

- With the hob switched off, touch the hob ON/OFF sensor ① and the safety lock sensor  **at the same time** until the indicator lamp for the safety lock flashes.

A *P* (Programme) and an *S* (Status) will appear in the cooking zone display with a number which shows the current setting (see chart).

- To select the programme you want, touch the **+** or **-** sensor for the **front left** cooking zone, then select the required **status** by touching the **+** or **-** sensor for the **front right** cooking zone (see chart). You can alter several programmes one after the other in this manner.



To store the new settings in **memory**, touch the hob ON/OFF sensor ① until the displays go out.

If you **do not** wish to store the settings in memory, touch the safety lock sensor  until the displays go out.

If you select the programming function whilst a residual heat indicator is on, the residual heat indicator will flash for up to 45 minutes after you have finished using the programming function.


However, you can continue to use the appliance as usual during this time.

Programming

Programme*	Status**	Setting
P 0 Demonstration mode and factory default settings	S 0	Demonstration mode on
	S 1	Demonstration mode off
	S 9	Factory default settings reinstated
P 1 Keypad tone when a sensor is touched	S 0	Off
	S 1	On
P 3 Audible tone for the Timer	S 0	Off
	S 1	Audible tone on for 10 seconds
	S 2	Audible tone on for 4 minutes
P 4 Safety lock	S 0	One finger locking using 
	S 1	Three finger locking using  and + on the two right-hand cooking zones
P 5 Stop and Go	S 0	Off
	S 1	On
P 6 Loudness of keypad and audible tones	S 0	Quiet
	S 1	Medium
	S 2	Loud

* Programmes not shown here have no allocation.

 ** The factory default settings are shown in bold.

Programme*	Status**	Setting
P 7 Extended cooking area when switching on a cooking zone	S 0 S 1 S 2 S 3 S 4 S 5 S 6 S 7 S 8 S 9 S 10	Not switched on at the same time Switches on at the same time as follows: Front left Front right Back middle (KM 5673) Back right (KM 5670) Front left and front right Front left and back middle (KM 5673) Front left and back middle (KM 5673) Front left and back right (KM 5670) Front right and back right (KM 5670) Switch on all extended areas
P 10 Power setting when the cooking zone is switched on	S 0 S 1	0 6 (can only be selected when Auto heat-up is activated)
P 12 Auto heat-up	S 0 S 1 S 2 S 3	Off Activated by selecting the power setting using - Activated by selecting the power setting using + Activated every time the hob is switched on
P 13 Residual heat indicator	S 0 S 1	<i>H</i> as the residual heat indicator symbol  as the residual heat indicator symbol

* Programmes not shown here have no allocation.

** The factory default settings are shown in bold.

Programming

Programme*	Status**	Setting
P 14 Timer starting value	S 0	00
	S 1	The most recently set time (see "Timer default setting")
P 15 Timer functions	S 0	Minute minder only
	S 1	Auto switch-off only
	S 2	Minute minder and Auto switch-off
P 16 Power setting range	S 0	12 power settings (1, 2, 3 ... to 12)
	S 1	23 power settings (1, 1., 2, 2., 3 ... to 12)

* Programmes not shown here have no allocation.

** The factory default settings are shown in bold.

Installation work and repairs to electrical components of this appliance must only be carried out by a suitably qualified and competent person in accordance with current local and national safety regulations (BS 7651 in the UK).

Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

What to do if, ...

... the hob or cooking zones cannot be switched on

Check whether

- the safety lock is activated.
If necessary, deactivate it (see "Safety lock" and "Programming - P4").
- the mains fuse has blown.

If neither of the above is the case, then disconnect the appliance from the electricity supply for approx. 1 minute.

To do this:

- switch off at the mains, or
- withdraw the mains fuse.

Reset the trip switch in the mains fuse box, and switch the appliance back on.

If it still will not switch on, contact a qualified electrician or the Miele Service Department.

... the hob can be switched on and settings selected, but the cooking zones do not heat up

Check whether you set the demo-mode setting by mistake (see "Programming - P0").

... the hob switches off while it is in use and the residual heat indicator or a flashing *F* appears in the display for at least one of the cooking zones and, if applicable, an audible tone sounds

One of the cooking zones has probably been on for too long, or one of the sensors may have been covered over (see "Safety switch-off").

... the heating switches on and off at the highest setting on one of the cooking zones

The overheating protection mechanism has been triggered (see "Overheating protection").

Problem solving guide

... the food in the pan hardly heats up or does not heat up at all when the Auto heat-up function is switched on

This could be because:

- there is too much food in the pan.
- the pan is not conducting heat properly.

Select a higher continued cooking setting next time, or start cooking at the highest setting and then turn down to a lower setting manually later on.

... one or more residual heat indicators are flashing

- There was an interruption to the power supply during operation, and the hob has switched itself off.

The hob can be used again as normal. Check the cooking stage of the food and whether its condition has been affected by the power failure before switching the cooking zone(s) back on again.

- The residual heat indicators have lit up during programming.

... numbers light up in the Timer display, and *R*, *F* and numbers light up in the cooking zone display, when the hob is switched off.

The sensitivity level of the sensors has altered and cannot recalibrate automatically. The sensors must be recalibrated manually (see "Calibrating the sensor switches").

If this does not solve the problem, please call the Miele Service department.

... an *F* appears in the display for the left hand cooking zones, an *E* appears in the display for the right hand cooking zones and numbers appear in the timer display.

Interrupt the power supply to the hob for approx. 1 minute.

If the problem persists after reconnecting the appliance to the power supply, please contact the Miele Service department.

After sales service

 
In the event of any faults which you cannot remedy yourself, or if the appliance is under guarantee, please contact:

- your Miele dealer, or
- the Miele Service Department (see address on back cover).

When contacting your Dealer or the Service Department, please quote the model and serial number of your appliance which are given on the data plate.

Please note that telephone calls may be monitored and recorded for training purposes.

Space in which to stick the extra data plate supplied with the appliance. Ensure that the model number is the same as the one on the front of these operating instructions.



Installation

Safety instructions for installation

Fit the wall units and extractor hood before fitting the hob to avoid damaging the appliance.

The veneer or laminate coatings of worktops (or adjacent kitchen units) must be treated with 100 °C heat-resistant adhesive which will not dissolve or distort. Any backmoulds must be of heat-resistant material.

This equipment may only be used in mobile installations such as ships, caravans, aircraft etc. if a risk assessment has been carried out by a suitably qualified engineer.

The hob may not be built in over a fridge, fridge freezer, dishwasher, washing machine or tumble dryer.


After installing the hob, ensure that the connection cable cannot come into contact with the underside of the appliance. Make sure that there is no mechanical obstruction, such as a drawer, which could damage it.

Observe carefully the safety distances given on the following pages.

Do not use any sealant except where expressly instructed to do so. The sealing strip under the edge of the top part of the hob provides a sufficient seal for the worktop (see section "Seal").

All dimensions in this instruction booklet are given in mm.

Safety distance above the hob

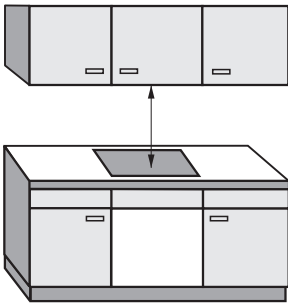

When two or more appliances are installed together below a cooker hood, e.g. an electric hob and a gas wok combiset, which have different safety distances given in their installation instructions, you should select the greater distance of the two.

For the distance between the appliance and cooker hood installed above, please follow the cooker hood manufacturer's instructions.

For any flammable objects, e.g. utensil rails etc., a minimum safety distance of 760 mm should be maintained between it and the hob below.


 
Installation

Safety distances to the sides of the hob


Ideally the hob should be installed with plenty of space on either side. There may be a wall at the rear and a tall unit or wall at one side. On the other side, however, no unit or divider should stand higher than the hob (see illustrations).

The following minimum distances should be adhered to for safety reasons:


- 50 mm to the right or left of the worktop cut-out to the nearest piece of furniture (e.g. tall unit).
- 50 mm from the worktop cut-out to the rear wall.

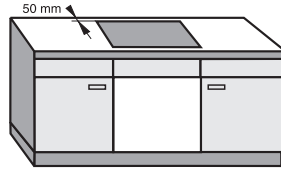

Recommended

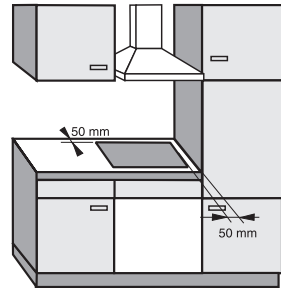

Not recommended

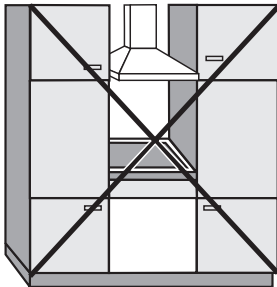


Not allowed

Safety distance when installing the appliance on a wall with additional niche cladding


There must be a minimum distance of 50 mm between the niche cladding and the worktop cut-out.

This distance is only necessary for niche cladding made of wood or any other combustible material. For non-combustible materials (metal, ceramic tiles or similar), this dimension can be reduced by the thickness of the niche cladding material. Materials can warp or distort when subjected to high temperatures.

Flush-fitted hobs

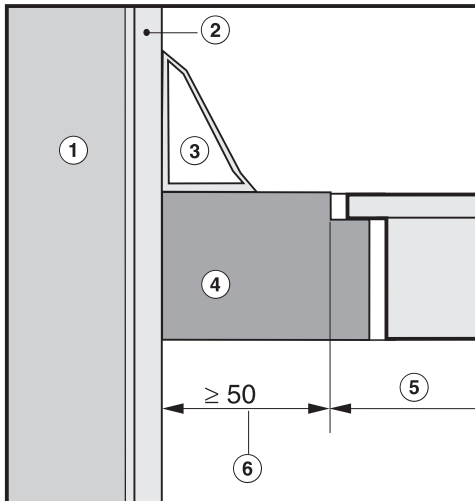


Hob with frame or bevelled edge

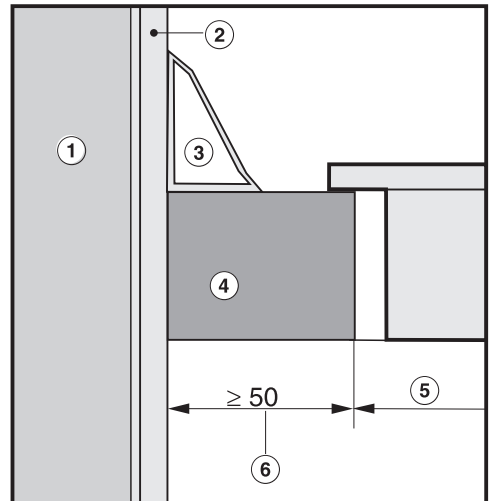

- ① Masonry
- ② Niche cladding
- ③ Backmould
- ④ Worktop
- ⑤ Worktop cut-out
- ⑥ Minimum distance of 50 mm

KM 5673

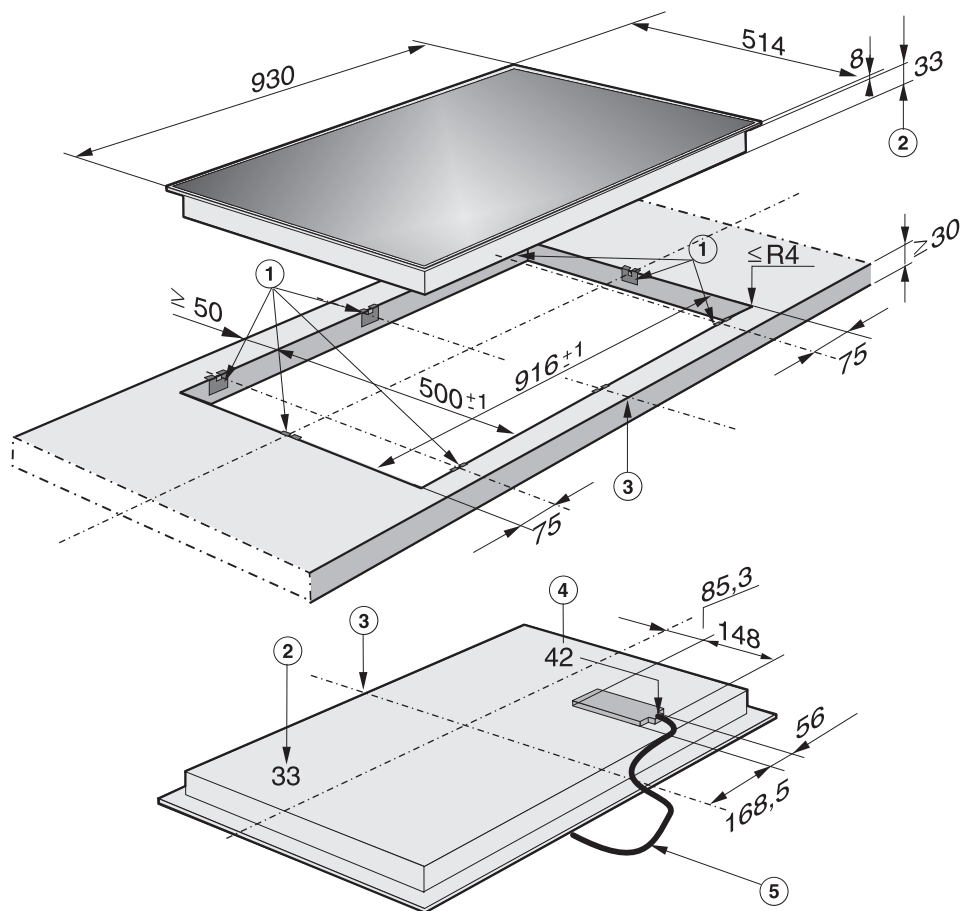

- ① Spring clamps
- ② Building-in depth
- ③ Front
- ④ Building-in depth for mains connection cable
- ⑤ Mains connection cable, L = 1440 mm

Installation


Preparing the worktop

- Make the worktop cut-out following the dimensions applicable. Remember to maintain a minimum safety distance of 50 mm from the back wall, as well as from any tall unit or side wall to the right or left of the hob. See "Safety instructions for installation".
- Seal the cut surfaces with a suitable heat-resistant sealant to avoid swelling caused by moisture.

If, during installation, you find that the seals on the corners of the frame are not flush with the worktop surface, the corner radius ($\leq R4$) can be carefully scribed to fit.


Fixing the spring clamps

Worktops made of wood, Corian and Askilan etc.

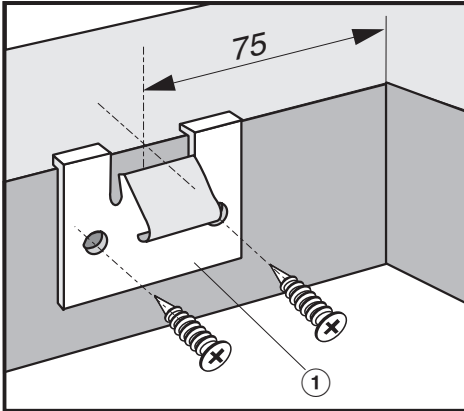


- Position the spring clamps (supplied) ① in the positions shown (see "Building-in dimensions") by placing them on the upper edge of the cut-out as illustrated, and secure with the 3.5 x 25 mm screws supplied.

Granite and marble worktops

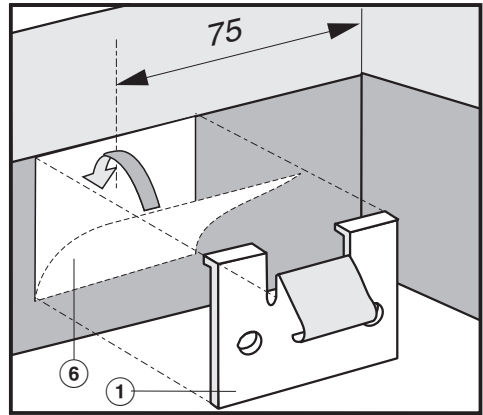

- Position the spring clamps ①, and fix in place using double-sided tape ⑥.

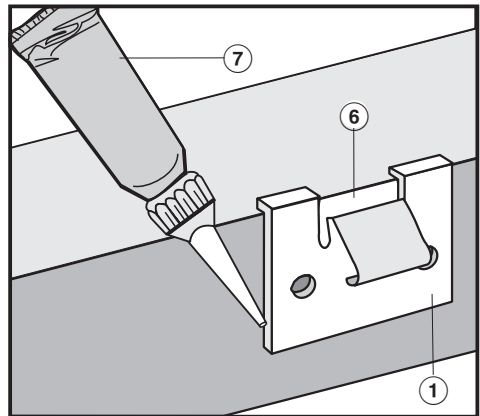

- Apply silicone ⑦ to the side edges and lower edge of the spring clamps.

The screws are not required for granite or marble worktops.


Installation

Installing the hob


- Feed the hob connection cable down through the cut-out.
- Lightly position the hob on the spring clamps ①.
- Using both hands, press down evenly on the sides of the hob until it clicks into position. When doing this make sure that the seal under the hob sits flush with the worktop on all sides. This is important to ensure an effective seal all round. Do not use sealant.
- Connect the hob to the mains.
- Check that the hob works.

The hob can now only be removed with a special tool.


Wooden worktops

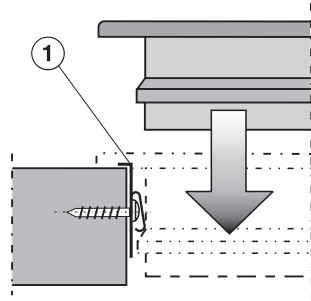

Granite and marble worktops

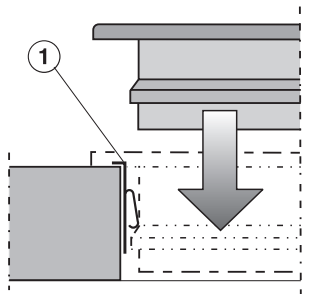

Sealant

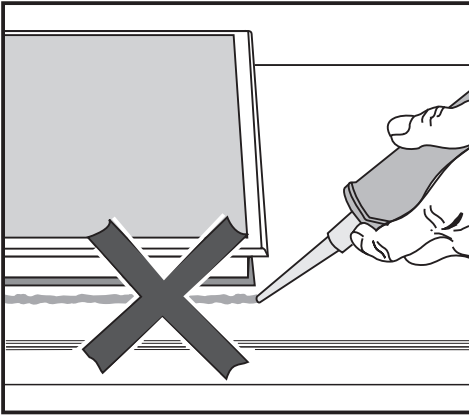

Do not use any sealant unless expressly instructed to do so. The sealing strip under the edge of the top part of the hob provides a sufficient seal for the worktop.

Do not use sealant between the frame of the top part of the hob and the worktop.

This could cause difficulties if the hob ever needs to be taken out for servicing and possibly result in damage to the hob frame or the worktop.

Installation

Electrical connection

All electrical work should be carried out by a suitably qualified and competent person, in strict accordance with current local and national safety regulations (BS 7651 in the UK).

Installation, repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Ensure power is not supplied to the appliance until after installation or repair work has been carried out.

The appliance must only be operated when built-in. This is to ensure that all electrical parts are shielded. Live parts must not be exposed.

Do not connect the appliance to the mains electricity supply by an extension lead. These do not guarantee the required safety of the appliance.

The **voltage and connected load** are given on the **data plate**. Ensure that these match the household mains supply.

Connection should be made via a suitable isolator which complies with national and local safety regulations, and the On/Off switch should be easily accessible after the appliance has been built in.

If the switch is not accessible after installation (depending on country) an additional means of disconnection must be provided for all poles.

For extra safety it is advisable to install a residual current device (RCD), with a trip current of 30 mA.

When switched off there must be an all-pole contact gap of at least 3 mm in the isolator switch (including switch, fuses and relays).

Important U.K.

The appliance is supplied for connection to a 230-240 V, 50 Hz supply with a 3-core cable.

The wires in the mains lead are coloured in accordance with the following code:

Green/yellow = earth

Blue = neutral

Brown = live


WARNING
THIS APPLIANCE MUST BE
EARTHED

The electrical safety of this appliance can only be guaranteed when continuity is complete between the appliance and an effective earthing system, which complies with local and national regulations. It is most important that this basic safety requirement is regularly tested and if there is any doubt, the electrical wiring in the home should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system such as an electric shock.

The manufacturer cannot be held liable for damage which is the direct or indirect result of incorrect installation or connection.

Installation

Wiring diagram

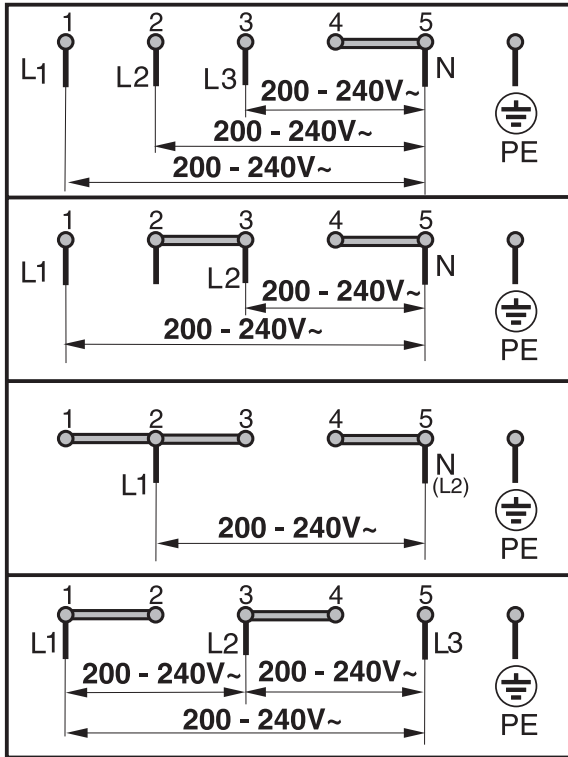

N.B. This appliance is supplied single phase only in the U.K. / AUS / NZ

United Kingdom:

Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
tel. Abingdon (01235) 554455
Service Office: (01235) 554466
fax (01235) 554477
Internet: www.miele.co.uk

Ireland:

Miele Ireland Ltd.
Broomhill Road, Tallaght, Dublin 24
Tel: (01) 46 10 710, Fax: (01) 46 10 797
Email: info@miele.ie
Internet: <http://www.miele.ie>

Australia:

Miele Australia Pty. Ltd.
A.C.N. 005635398
1 Gilbert Park Drive
Knoxfield, VIC 3180
Telephone: (03) 9764 7100
Fax: (03) 9764 7129
Internet: www.miele.com.au

Distributor New Zealand:

Steelfort Engineering Company. Ltd.
500 Rangitikei Street
Palmerston North, Priv. Bag 11045, NZ
Telephone: (06) 350 1350
Fax: (06) 356 1507

South Africa:

Miele (Pty) Ltd
63 Peter Place
Bryanston 2194
P.O. Box 69434
Bryanston 2021
Tel.: (011) 548 1900
Telefax (011) 548 1935
Internet: www.miele.co.za
E-mail: info@miele.co.za

Singapore:

Miele Southeast Asia
Miele Pte. Ltd.
163 Penang Road
04 - 02/03 Winsland House II
Singapore 238463
Tel : +65-67351191
Fax: +65-67351161
Email: infosea@miele.com.sg
Internet: www.miele.sg

Hong Kong:

Miele (Hong Kong) Limited
AIA Plaza, 24th Floor
18 Hysan Avenue
Causeway Bay
Hong Kong
Tel.: (852) 2610 1331
Fax: (852) 2610 1013
E-mail: mielehk@miele.com.hk